


Direction and Suggestions for Installing 1967,68,69 Camaro Trunk Panel Kit 317-6

*Thank you for ordering our
upholstery panels!*



www.customtrunkpanels.com

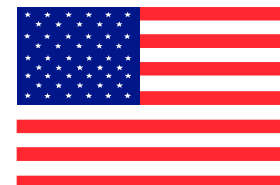

Made In The USA

Please Note, test fit all panels first before upholstery;

Based on your particular car, you may find it necessary to custom-trim here and there. This will depend upon the type of material you choose to cover the trunk panels with, how much foam you add or how you decide to custom finish your panels. If you find it necessary, a quick trim adjustment using an electric sander with 80 grit paper or a rasp file is all that will be required. Once the panel is upholstered, If you have too much space between the body of the car and the floor you may need to raise the panels up for them to lock in place. You can use foam rubber under the floor panel to do this.


For some installations, it will be necessary to remove the spare tire hold down brackets using a cutoff wheel.

Most sedan/coupes are the same, **convertibles will need more work to fit correctly.** This is where the installation process will need some trim sanding and cutting.

Thank you for buying our panels. Help tech line 724-418-1003.



www.customtrunkpanels.com

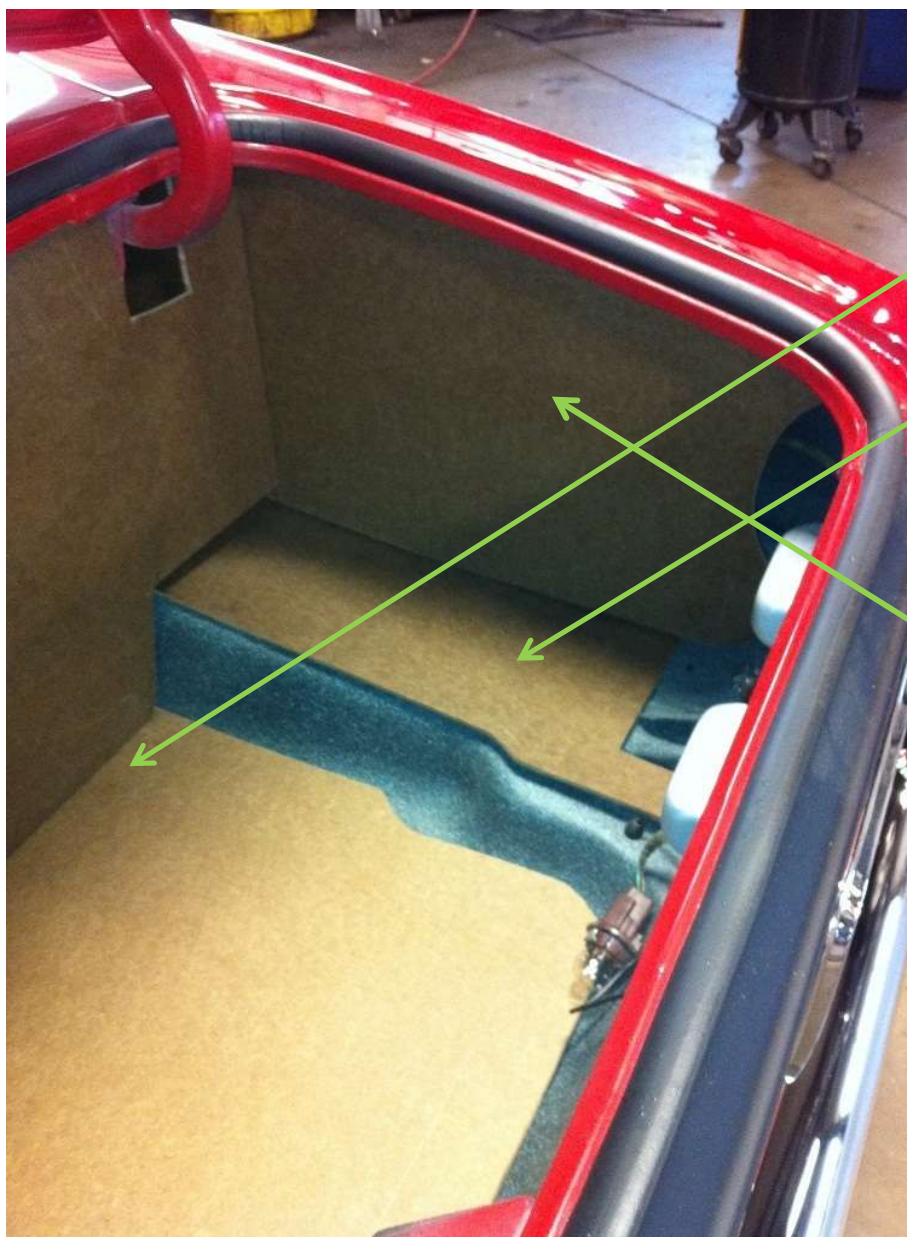


317-6 Camaro Instructions 1

- The floor will be put in first, it may have to be turned to fit, and one side is different than the other. Note the cutout to fit the form of the floor.
- The next pieces to go in are the smallest panels and fit on the right side (shown) with the edge of the piece shadowing the edge of the trunk floor. This piece will fit on one side of the trunk brace only. These are two pieces that are exactly the same in size.
- Next in are the two pieces to go in are the right and left rear fender panels. These can be tricky because there is no material on the panels to hold them in place. Orient the large cutout to the rear of the panel by the tail lights and the little notch in the front pointing down over the metal flange on the fender well.

317-4 Carpet Camaro Instructions 2

- It is an option to set the floor piece or the 2 side floor pieces., they will help keep the carpet flat. Let the carpet set out in sunlight to help shape it. You can also use a heat gun with extreme caution, be careful not to get too close to the carpet.

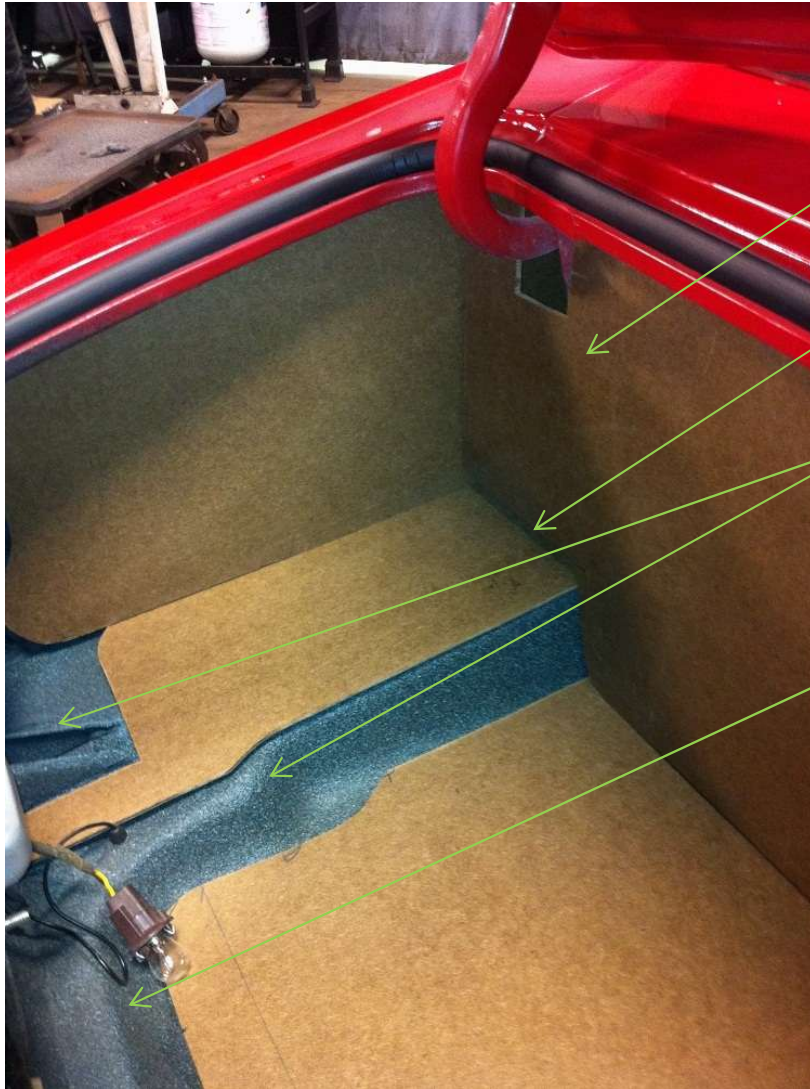

317-6 Camaro Instructions 1

- The last piece to go in is the hinge panel and it goes in top first with bottom angled out toward the back of the trunk.
- Once the top is in, push the bottom toward the hinges until the panel is straight up and down. See the picture for fitment.
- Note that you will have to cover the floor edge with material first before putting any material on any of the panel pieces. These pieces for the right side and left side measure approximately 22" wide by 30" long.
- The back edge material piece will measure approximately 40" long and 8" wide.
- There are no fasteners or screws needed, It is tension that will hold the panels in place. See the next set of pictures for the finished trunk with material on the panels.

317-4Carpet Camaro Instructions 2

- This will apply to you if you have purchased 317-4C. Do make sure the carpet goes all the way to the inner fender on both sides and up to the top part of the front of the trunk. Gluing it to the floor is an option. Sound deadener is also an option.

317-6 Camaro Instructions 3

This picture shows the panels covered and it shows the optional tail light cover piece to be available soon.



www.customtrunkpanels.com

Now Available for Most Chevy's Trunk Panel Kits for Finishing with Upholstery

- Chevy 1955,56,57 Panel Kit No. 417-4
- Chevelle 1966,67 Panel Kit No. 516-5
- Chevelle 1968-69 Panel Kit No. 517-5
- Chevelle 1970-72 Panel Kit No. 517-7
- Chevy Impala 1962-64 Panel Kit No.917-4
- Nova 1968-72 Panel Kit No. 817-5
- Mustang 1964,65,66 Panel Kit No. 617-5
- GTO 1966,67 Panel Kit No. 717-5

Save time and money using our trunk panel kits from
www.customtrunkpanels.com Visit our new online store

