


Direction and Suggestions for Installing 1964 – 65 Chevelle Trunk Panel Kit 515-5

Thank you for ordering our upholstery panels!



www.customtrunkpanels.com

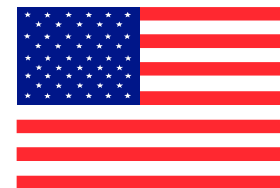

Made in the U.S.A.

Please Note, test fit all panels first;

Based on your particular car, you will find it necessary to custom-trim the panels here and there to fit your car trunk. This will depend upon the type of material you choose to cover the trunk panels with or how much foam you add.

If you do find it necessary to trim, an adjustment using an electric sander with 80 grit paper is all that will be required. Once the panel is upholstered, If you have too much space between the body of the car and the floor you may need to raise the panels up for them to lock in place, you can use foam rubber under the floor panel to lift the panel up and to lock into place.

For some installations, it will be necessary to remove the spare tire hold down brackets using a cutoff wheel.

Most sedans are the same, convertibles will need to be trimmed. This is where the installation process will need some sanding and cutting.


Thank you for buying our panels. Help tech line 724-418-1003.




www.customtrunkpanels.com

**This is your 5 piece hardboard trunk panel kit, 515-5
1964 – 65 Chevelle**

The crayon mark is “this side out/up” on all panels, except, Right Side Panel crayon mark goes in.

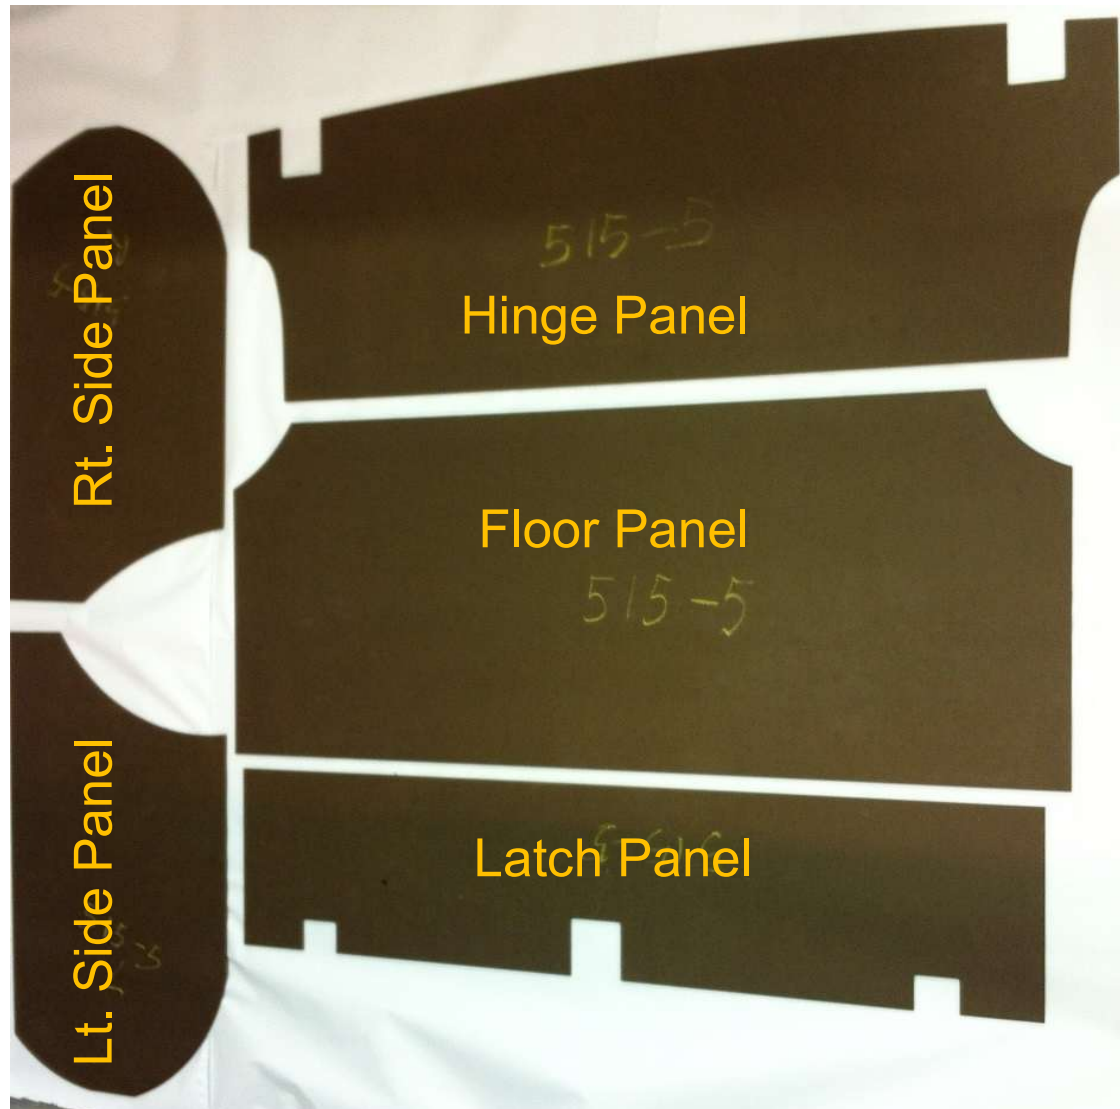

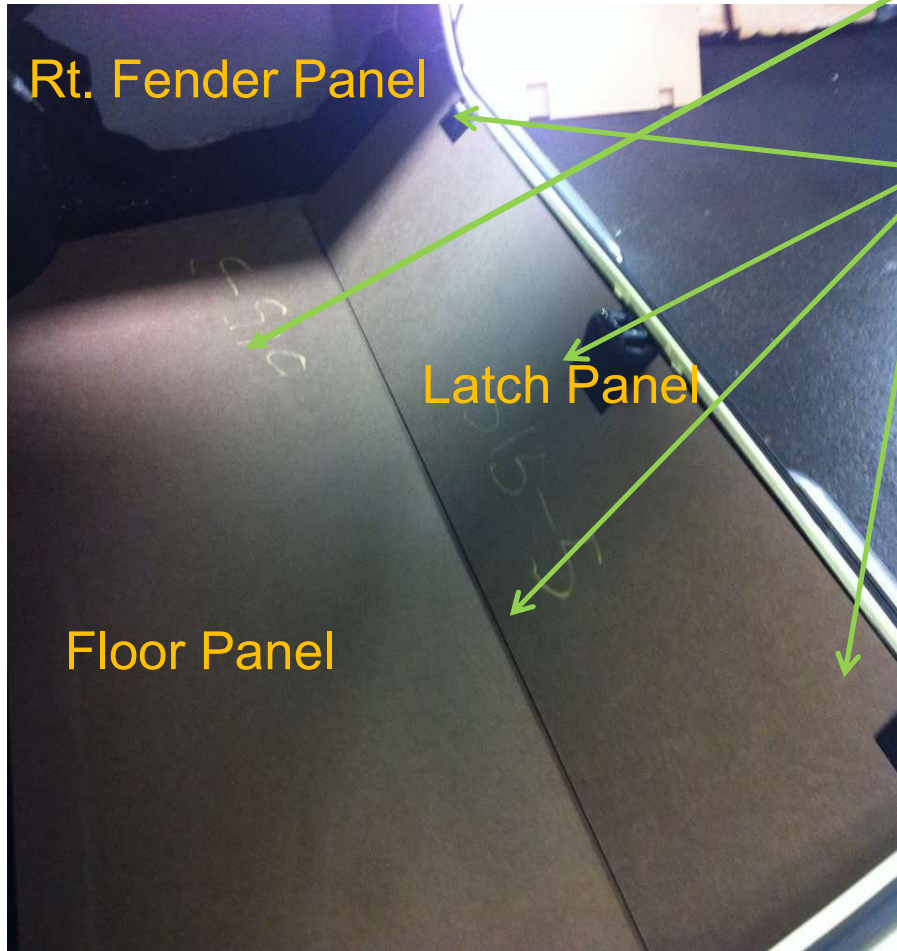

515-5 Instructions

- The floor will be put in first, it may have to be turned to fit because one side is different than the other. Note the cutout to fit the form of the wheel well area of the floor.
- The next piece to go in is the back latch panel and fits around the latch and the two side trunk braces. This piece will fit against the back edge of the floor panel, this will keep it from sliding down. Next in are the two pieces of the right and left fender panels. These can be tricky because there is no material on the panels to hold them in place. Tilt the top edge in first and then slide in the bottom of the right or left fender panel. Pull the top of the panel against the lip of the trunk



515-5 Instructions

- The last piece to go in is the hinge panel and it goes in top first with bottom angled out toward the back of the trunk.
- Once the top is in, push the bottom toward the hinges until the panel is straight up and down.
- Note that you will have to cover both the wheel well edges with material first before putting any material on any of the panel pieces. These pieces for the wheel well right side and left side measure approximately 22" square.
- There are no fasteners or screws needed, It is tension that will hold the panels in place. See the next set of pictures for the finished trunk with material on the panels.
- This picture of the finished trunk shows how clean a look can be made in your trunk with these panels.

Now Available for Most Chevy's
Trunk Panel Kits for Finishing with Upholstery

- Chevy 1955,56,57 Panel Kit No. 417-4
- Chevelle 1966,67 Panel Kit No. 516-5
- Chevelle 1968-69 Panel Kit No. 517-5
- Chevelle 1970-72 Panel Kit No. 517-7
- Chevy Impala 1962-64 Panel Kit No.917-4
- Nova 1968-72 Panel Kit No. 817-5
- GTO 1966-67 Panel Kit No. 718-5

Save time and money using our trunk panel kits from
www.customtrunkpanels.com Visit our new online store

