

Directions and Suggestions for 1962 – 67 Chevy II and Nova

Part No. 818-5C



www.customtrunkpanels.com



Made In The USA

Please Note; Test Fit All Panels First

Based on your particular car, you may find it necessary to custom-trim here and there, it will depend upon the type of material you choose to cover the trunk kit panels, how much foam you add or how you decide to custom finish your panels. If you find it necessary, a quick trim adjustment using an electric sander with 80 grit paper or a rasp file is all that will be required. Tension holds the panels in place, no screws, fasteners or Velcro needed.

For some installations, it will be necessary to remove the spare tire hold down brackets using a cutoff wheel.

A typical stock trunk area is what comes with most sedans and hardtops. This is where the installation process is the same, regardless. Trim sanding is all that will be needed.

Carefully remove the tape holding the scrap pieces to prevent breakage. Pulling on the tape too hard can break the boards.

Thank you for buying our panels for upholstery.

Help tech line 724-418-1003.



www.customtrunkpanels.com

This is a Quick Over View The of Install


Here's the 3 piece trunk kit installed before the carpet was laid down. This is to show you how the panels will fit in your 1962 to 67 Chevy II or Nova. Note the battery cutout which can be done by you if your battery is located in the trunk area.

When unpacking the trunk panels, carefully remove the tape holding the scrap pieces in the hinge to prevent breakage. Pulling on the tape too hard can break the boards.



First Steps of Install

- Lay the carpet into the trunk first for the test fit.
- Carefully remove the tape from trunk hinge panel holding the scrap pieces to prevent breakage. Pulling on the tape too hard can break the boards.
- Test fit all of the panels to insure that they will fit correctly. The first thing to do is lay your carpet into the trunk to cover the floor and the spaces that are metal, the carpet will go onto the the right and left side. The carpet is cut extra long and may need trimmed. The fender well area will need to be covered also.
- Have the carpet go as far forward as possible. The carpet is the first piece installed. Once the floor and metal sides are covered start test fitting the 3 panels that come with this kit, left side. Right side and hinge panel.

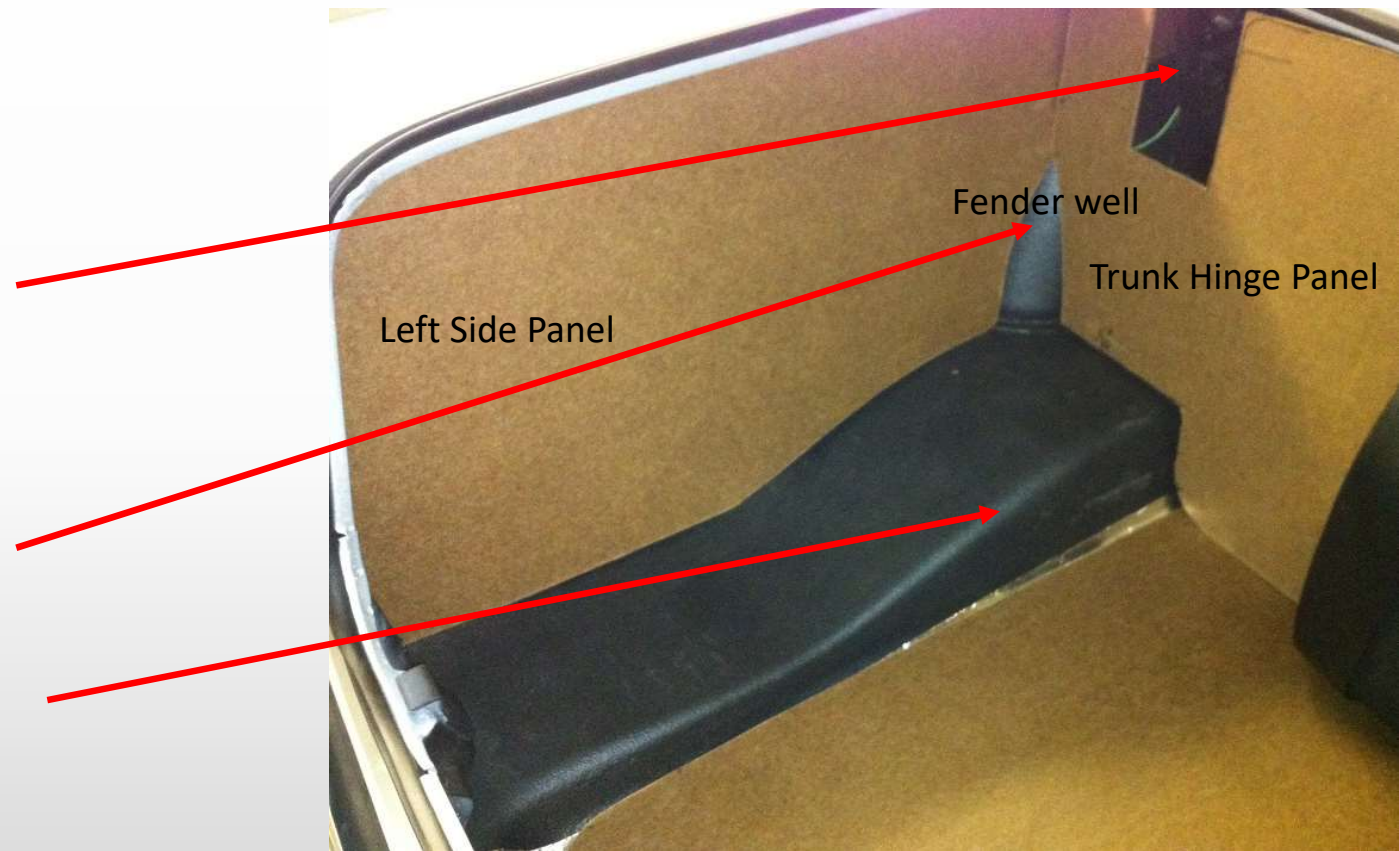

www.customtrunkpanels.com


Next Steps

Next install the two side panels on the left and right side of the trunk and each side is different. The side panels will need to be up against the top lip of the trunk, slide it in at the top first and then slide the bottom of the panel and pushed back against the tail lights.

Next install the hinge panel making sure to slide it in at the top first and then slide the bottom of the panel so there is a slight lean to the rear of the trunk, note the picture.



You will need to glue "A" to "C" and "B" to "C" at required width.
Then you will need to trim to length for proper fit

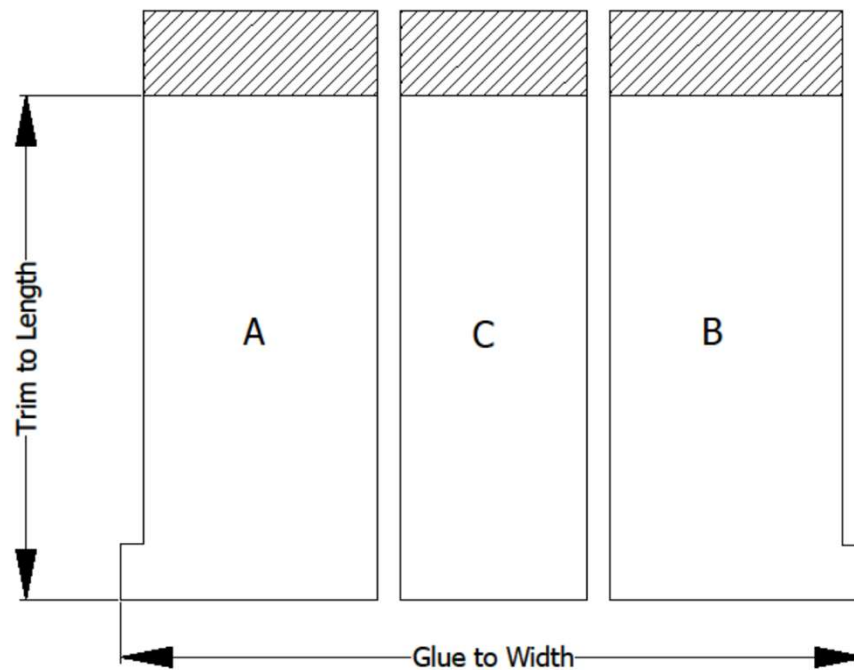



The Finished Trunk

The finished trunk will clean up the trunk area and will still leave room for storage. You can store behind the side panels and behind the hinge panel. Tension holds these panels in place no screws or Velcro is needed. Tech help call 724-418-1003.

www.customtrunkpanels.com

Now Available for Most Car's
Trunk Panel Kits for Finishing and Trunk
Upholstery

Chevy 1955,56,57 Panel Kit No. 417-4
Camaro 1967,68,69 Panel Kit No. 317-6
Chevelle 1968-69 Panel Kit No. 517-5
GTO 1966 - 67 Panel Kit No. 718-7
Chevy Impala 1962-64 Panel Kit No.917-4
Nova 1968-72 Panel Kit No. 817-5
Mustang 1964-5-6 Panel Kit No. 617-5
Mustang 1967-8 Panel Kit No. 618-5
Chevy 1941-48 Panel Kit No.1017-5

Save time and money using our trunk panel kits from

www.customtrunkpanels.com Tech Help Line 330-565-4688 ask for Bill

www.customtrunkpanels.com